




CD/DVD Player


Startup Guide / Guide de démarrage / Anleitung für die Inbetriebnahme / Guida all'avvio / Guía de inicio rápido / Snelstartgids / Startvejledning / Uppstartguide / Käynnistysopas / Guia de Início Rápido / Οδηγός εκκίνησης / Başlangıç Kılavuzu / Příručka spouštění / Használatba vételi útmutató / Ghid introductiv / Instrukcja uruchamiania / Руководство по началу работы / Посібник із налаштування / Іске қосу нұсқаулығы

1


A

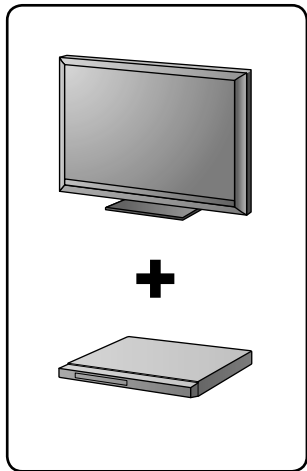


■ HDMI

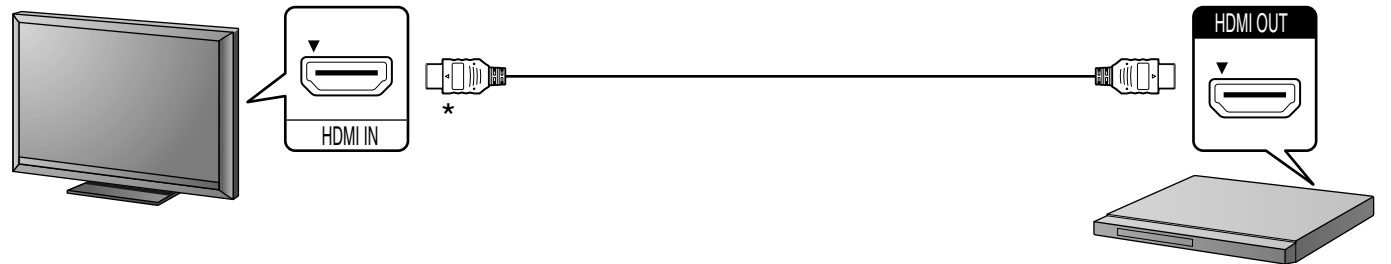


■ COMPONENT VIDEO & AUDIO

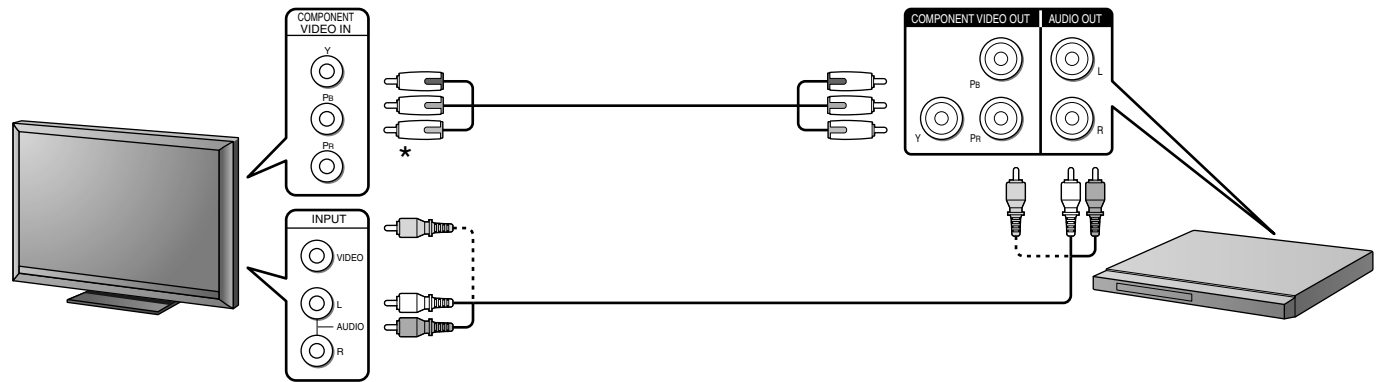


■ VIDEO & AUDIO

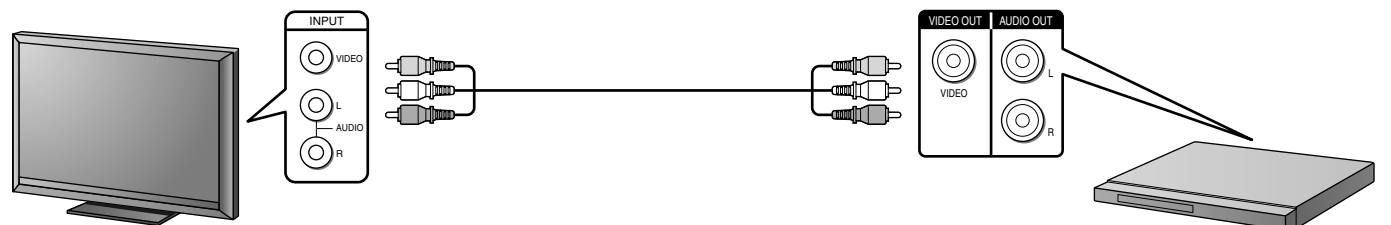


B

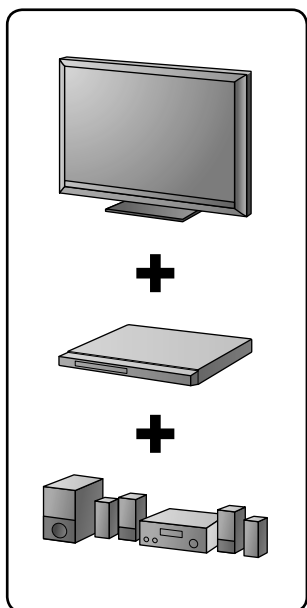

■ HDMI

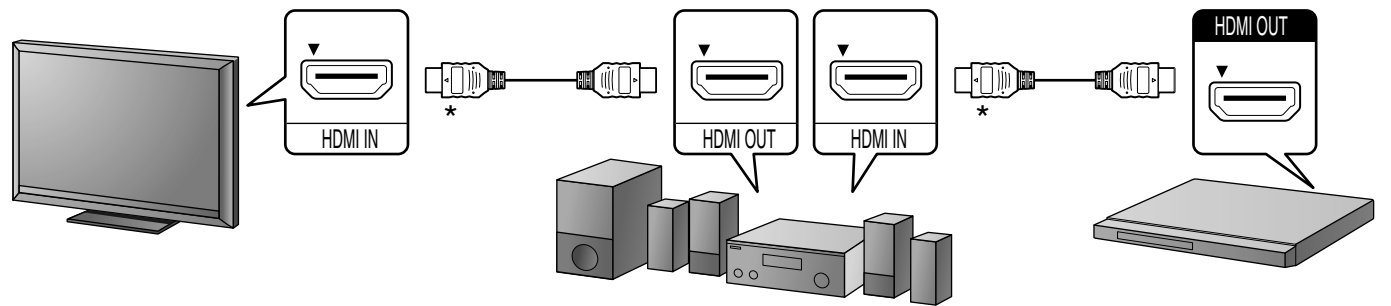

■ COAXIAL

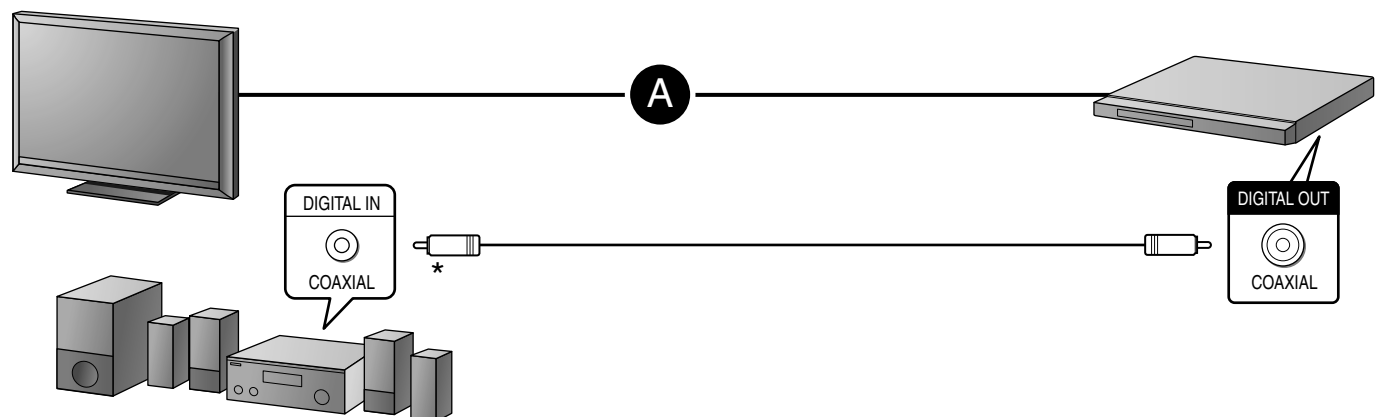


* Not supplied / Non fornito / Nicht mitgeliefert / Non in dotazione / No suministrado / Niet bijgeleverd / Medfølger ikke / Medfølger ej / Ei sisälly vakiovarusteisiin / Não fornecido / Δεν παρέχεται / Birlikte verilmez / Není součástí dodávky / Külön megvásárolható / Nu este inclus / Nie należy do wyposażenia / Не прилагается / Не поставляется / Берілмерген


I / ⏻ : on/standby / marche/veille / Ein/Bereitschaft / accensione/attesa / encendido/en espera / aan/wachtstand / tændt/standby / på/standby / virta/valmiustila / ligado/em espera / σε λειτουργία/σε αναμονή / açık/beklemede / zapnuto/pohotovost / be/készlet / pornit/veghe / właczona/oczekiwanie / вкл./ожидание / увімкнено/ очікування / қосулы/күту

2



1

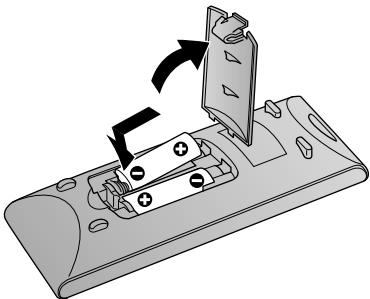

2

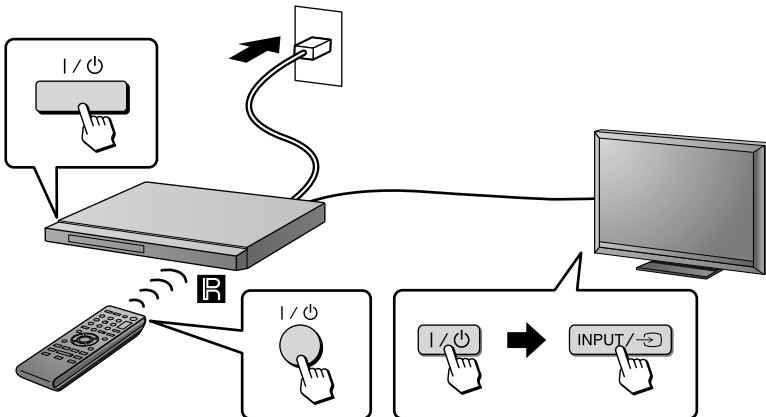


3

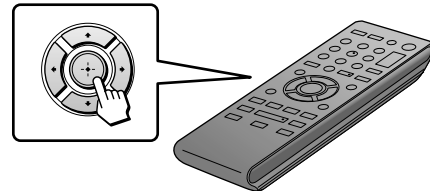
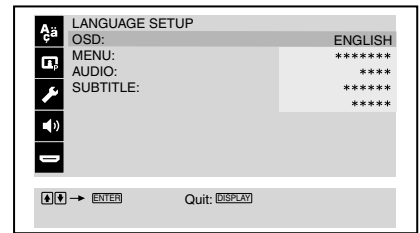


3

1

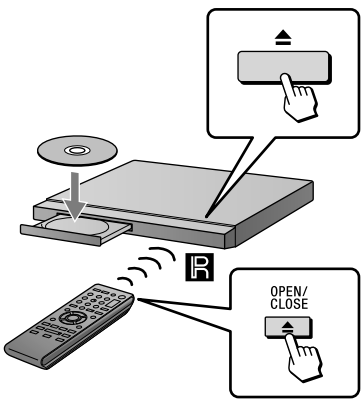

2

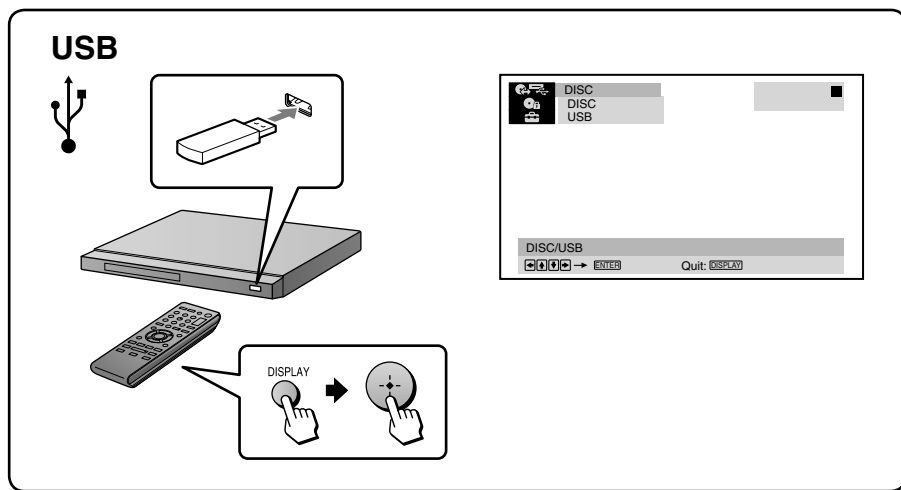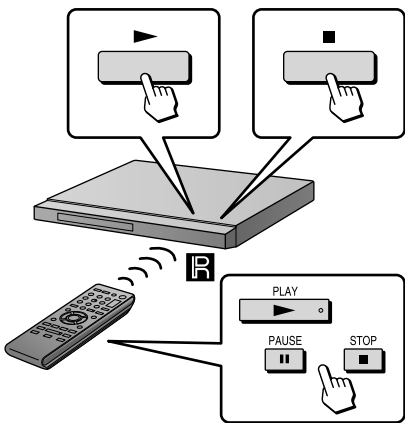

TIME/TEXT

PICTURE NAVI

AUDIO

SUBTITLE

MENU

CHAPTER

DISPLAY

FAST/SLOW PLAY

The diagram illustrates the following button functions:

- TIME/TEXT:** Shows a progress bar and time (0:00:20).
- PICTURE NAVI:** Shows a 3x3 grid of picture options (1-9).
- AUDIO:** Shows "1: ENGLISH DOLBY DIGITAL 3/2.1".
- SUBTITLE:** Shows "1: ENGLISH" and a subtitle "A mountain towers over a lake."
- MENU:** Shows a "CHAPTER" menu with options for Chapter 1 through Chapter 6.
- DISPLAY:** Shows a "TITLE" menu with options for "1 (1)" and "1 (12)", and a time display "T 0:00:00".
- FAST/SLOW PLAY:** Shows a progress bar with a person icon and playback controls.