


# FM/MW/LW Compact Disc Player


Installation/Connections  
Installation/Connexions  
Instalación/Conexiones  
Installation/Anschluss  
Montage/Aansluitingen  
Installazione/Collegamenti

CDX-HR910UI

©2008 Sony Corporation Printed in Thailand

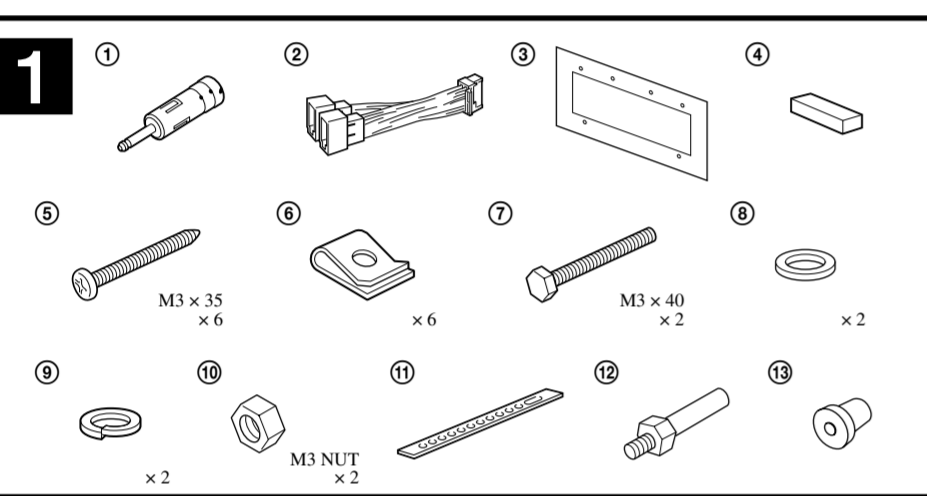

**Equipment used in illustrations (not supplied)**  
**Appareils utilisés dans les illustrations (non fournis)**  
**Equipo utilizado en las ilustraciones (no suministrado)**  
**In Abbildungen dargestellte Geräte (nicht mitgeliefert)**  
**Apparatuur gebruikt in de afbeeldingen (niet bijgeleverd)**  
**Apparecchiatura utilizzata nelle illustrazioni (non in dotazione)**

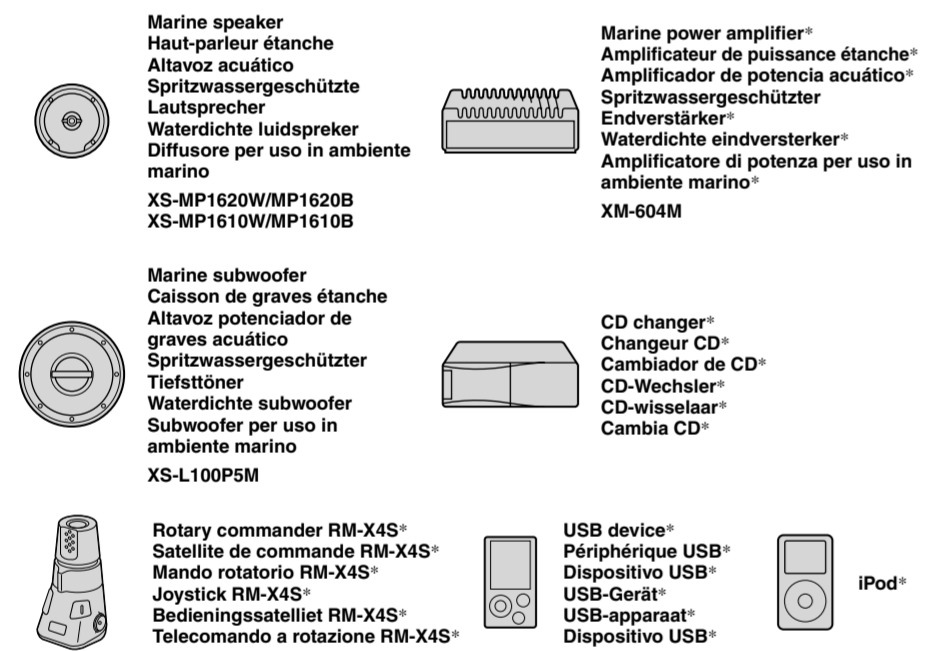

**Marine speaker**  
Haut-parleur étanche  
Altavoz acuático  
Spritzwassergeschützte Lautsprecher  
Waterdichte luidspreker  
Diffusore per uso in ambiente marino  
XS-MP1620/WMP1620B  
XS-MP1610/WMP1610B

**Marine power amplifier\***  
Amplificateur de puissance étanche\*  
Amplificador de potencia acuático\*  
Spritzwassergeschützter Endverstärker\*  
Waterdichte eindversterker\*  
Amplificatore di potenza per uso in ambiente marino\*  
XM-604M

**Marine subwoofer**  
Caisson de graves étanche  
Altavoz potenciodor de graves acuático  
Spritzwassergeschützter Tieftöner  
Waterdichte subwoofer  
Subwoofer per uso in ambiente marino  
XS-L100P5M

**CD changer\***  
Changeur CD\*  
Cambiatori de CD\*  
CD-Wechsler\*  
CD-wisselaar\*  
Cambia CD\*


**Rotary commander RM-X45\***  
Satellite de commande RM-X45\*  
Mando rotatorio RM-X45\*  
Joystick RM-X45\*  
Bedieningsatelliet RM-X45\*  
Telecomando a rotazione RM-X45\*

**USB device\***  
Périphérique USB\*  
Dispositivo USB\*  
USB-Gerät\*  
USB-apparaat\*  
Dispositivo USB\*

**Marine remote commander**  
Télécommande marine  
Mando a distancia subacuático  
Bootsfernbedienung  
Maritieme afstandsbediening  
Telecomando per uso in ambiente marino

**RM-X60M** **RM-X11M**  
\* not waterproof / non étanche / no resistente al agua / nicht wasserdicht / niet waterdicht / non resistente all'acqua

**RM-X60M** **RM-X11M**  
\* not supplied / non fourni / no suministrado / nicht mitgeliefert / niet bijgeleverd / non in dotazione

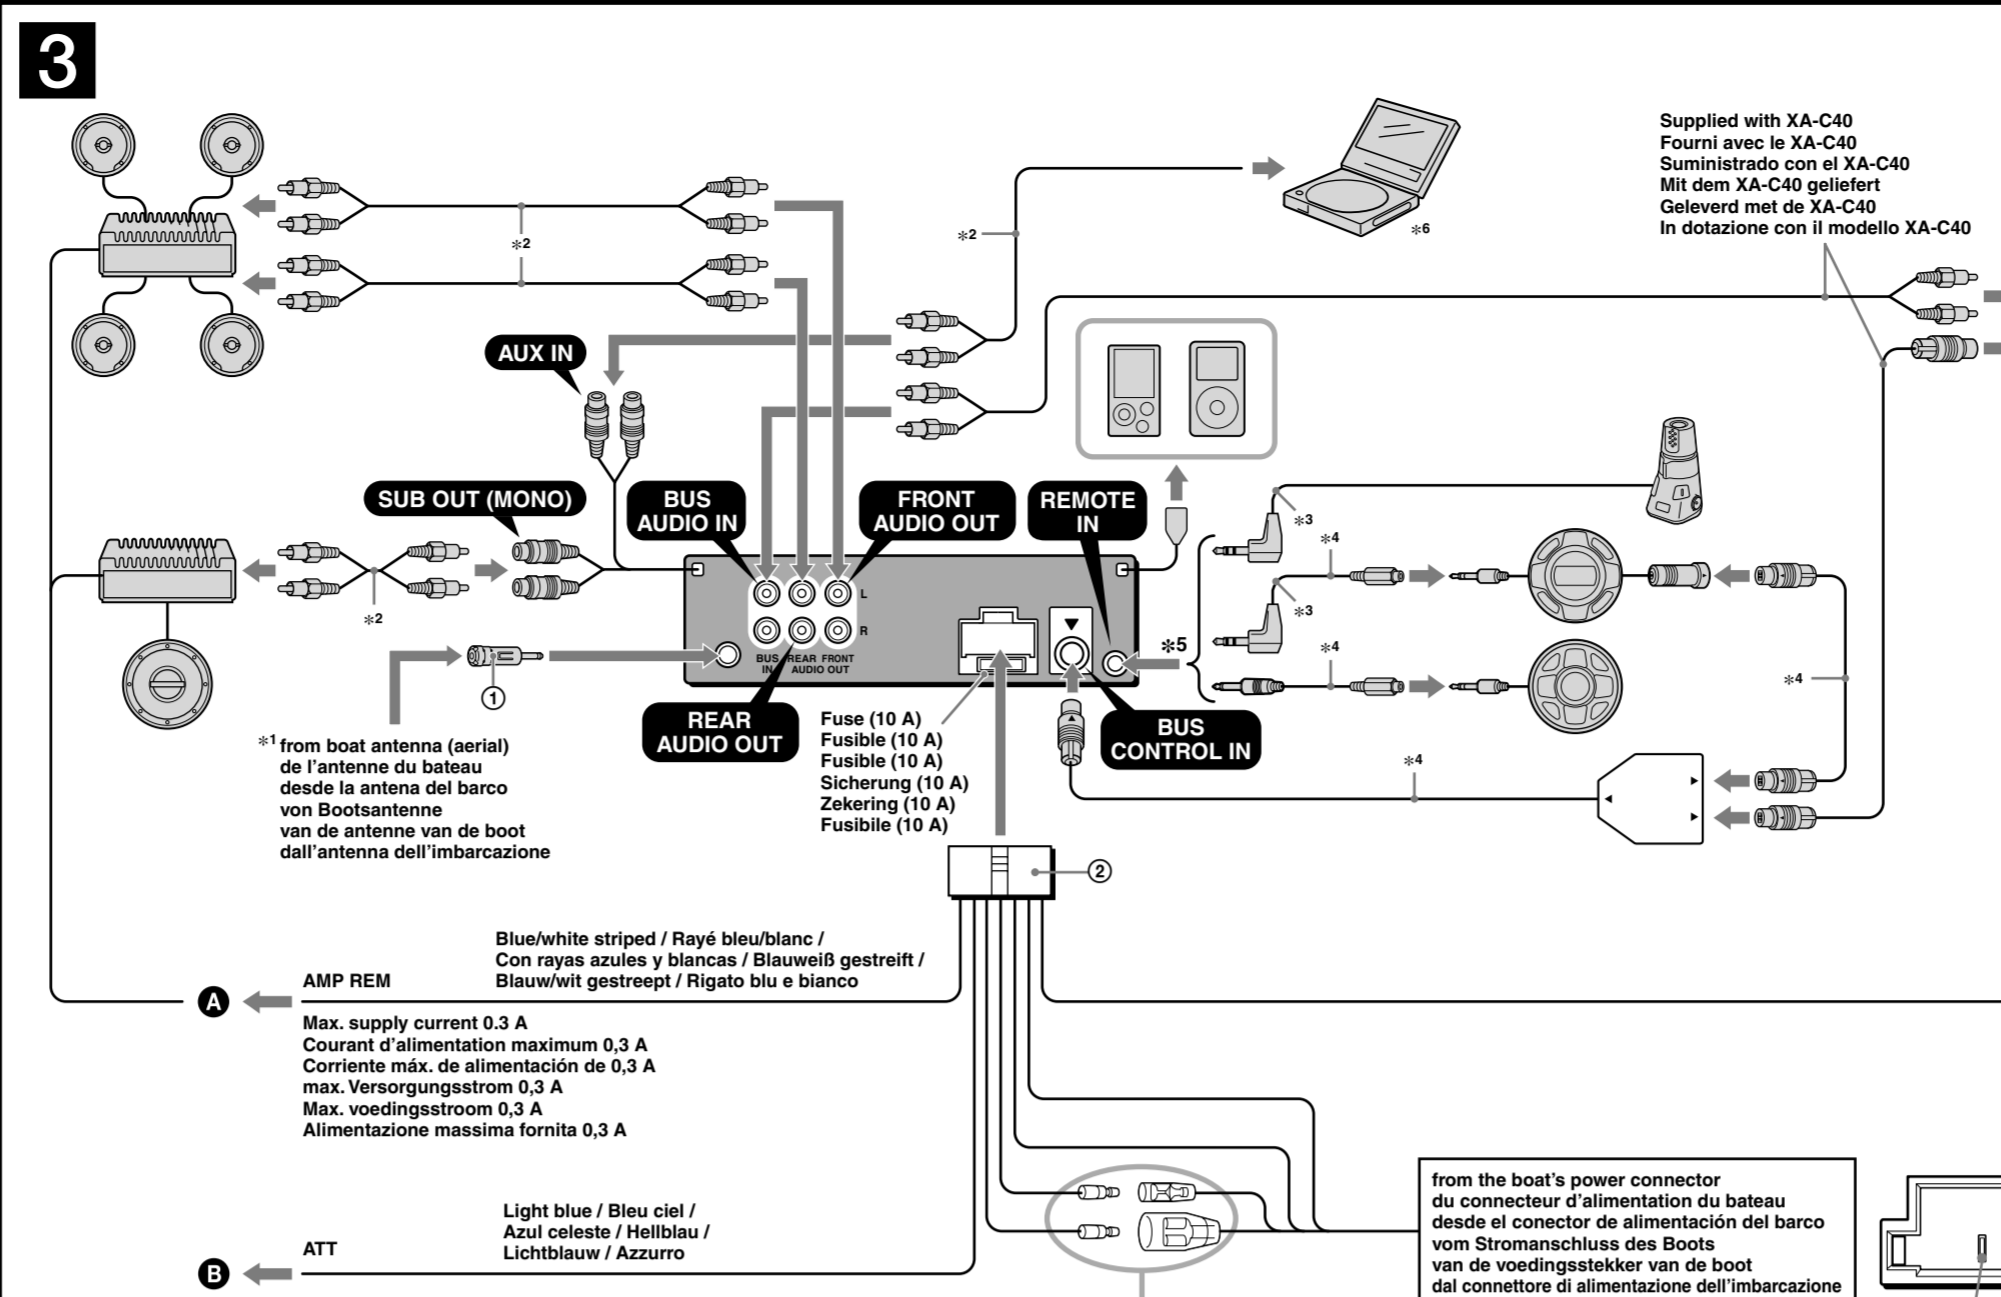

**AMP REM**  
Max. supply current 0.3 A  
Courant d'alimentation maximum 0,3 A  
Corriente máx. de alimentación de 0,3 A  
Max. Versorgungsstrom 0,3 A  
Max. voedingsstroom 0,3 A  
Alimentazione massima fornita 0,3 A

**ATT**  
Light blue / Bleu ciel / Azul celeste / Hellblau / Lichtblau / Azzurro

**See "Power connection diagram" on the reverse side for details.**  
Voir le "Schéma de raccordement d'alimentation" au verso pour plus de détails.  
Para obtener más información, consulte el "Diagrama de conexión de la alimentación" que encontrará al dorso.  
Näheres dazu finden Sie im „Stromanschlußdiagramm“. Blättern Sie dazu bitte um.  
Zie "Voedingsaansluitschema" op de achterkant voor meer details.  
Per ulteriori informazioni, vedere "Diagramma dei collegamenti di alimentazione" che si trova sul retro.

**Notes:**  
\*1 Note for the antenna (aerial) connecting...  
\*2 RCA pin cord (not supplied)...  
\*3 Insert with the cord upwards...  
\*4 Support with the marine remote commander...  
\*5 The RM-X45, RM-X60M and RM-X11M cannot be connected to this unit at the same time...  
\*6 Auxiliary equipment such as portable DVD player (not supplied)...

**Notes on the power supply lead (yellow):**  
When connecting this unit in combination with other stereo components, the connected boat circuit's rating must be higher than the sum of each component's fuse. When no boat circuits are rated high enough, connect the unit directly to the battery.

**Notes on the cable of source (blue):**  
If you connect the cable of source (blue) to the antenna terminal of the existing antenna (aerial) booster, the antenna booster will increase the signal strength.

**Notes on the cable of antenna (aerial):**  
If you connect the cable of antenna (aerial) to the antenna terminal of the existing antenna (aerial) booster, the antenna booster will increase the signal strength.



**Warning:**  
If you have a power antenna (aerial) without a relay box, connecting this unit with the supplied power connecting lead (3) may damage the antenna (aerial).

**Notes on the control and power supply leads:**  
The power antenna (aerial) control lead (blue) supplies +12 V DC when you turn on the tuner, when you activate the AF (Alternative Frequency) or TA (Traffic Announcement) function. When your boat has built-in FM/MW/LW antenna (aerial) in the rearview glass, connect the power antenna (aerial) control lead (blue) or the accessory power supply lead (red) to the power terminal of the existing antenna (aerial) booster. For details, consult your dealer.


**Memory hold connection:**  
When the yellow power supply lead is connected, power will always be supplied to the memory circuit even when the ignition switch is turned off.

**Warning:**  
Before connecting the speakers, turn the unit off. Use speakers with an impedance of 4 to 8 ohms, and with adequate power handling capacities to avoid damage. Do not connect the speaker terminals to the boat chassis, or connect the terminals of the right speakers with those of the left speaker.


**Memory hold connection:**  
When the yellow power supply lead is connected, power will always be supplied to the memory circuit even when the ignition switch is turned off.

**Warning:**  
Before connecting the speakers, turn the unit off. Use speakers with an impedance of 4 to 8 ohms, and with adequate power handling capacities to avoid damage. Do not connect the speaker terminals to the boat chassis, or connect the terminals of the right speakers with those of the left speaker.

**Warning:**  
Before connecting the speakers, turn the unit off. Use speakers with an impedance of 4 to 8 ohms, and with adequate power handling capacities to avoid damage. Do not connect the speaker terminals to the boat chassis, or connect the terminals of the right speakers with those of the left speaker.

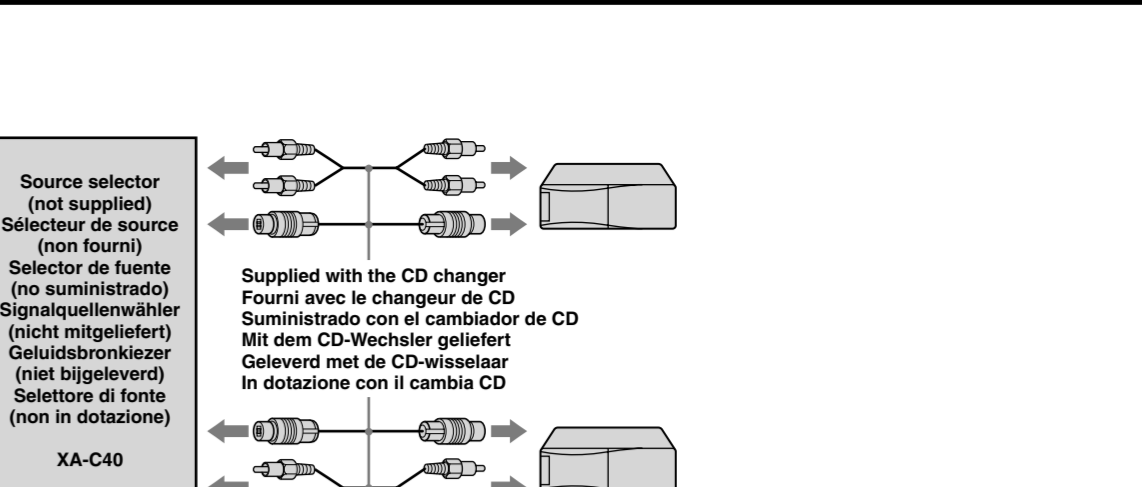

**Source selector (not supplied)**  
Sélecteur de source (non fourni)  
Selector de fuentes (no suministrado)  
Signalquellenwähler (nicht mitgeliefert)  
Geluidsbronkeuze (niet bijgeleverd)  
Selettore di fonte (non in dotazione)

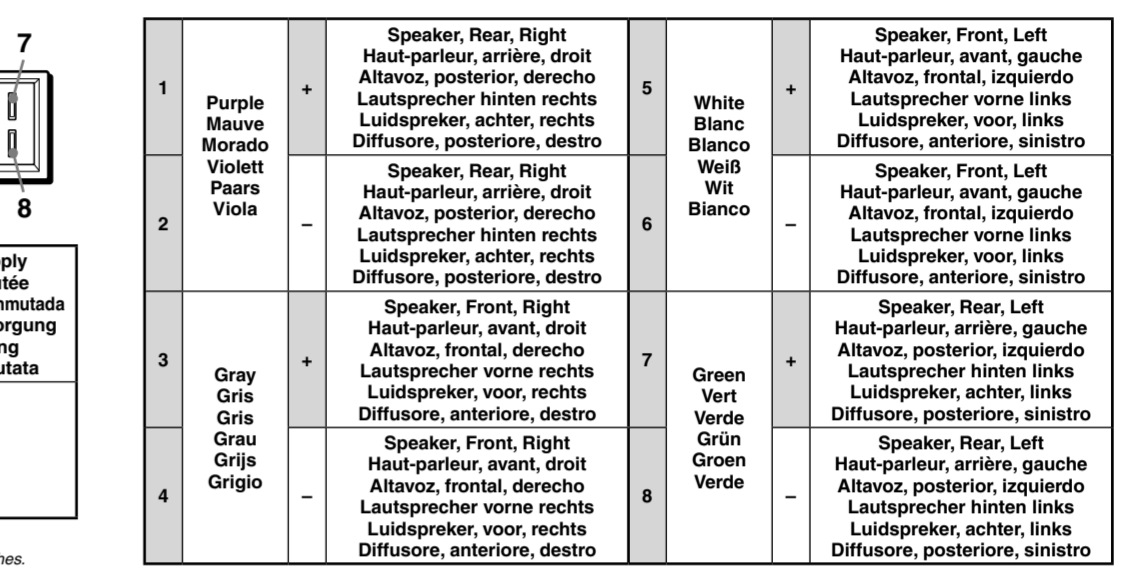

**Speaker, Rear, Right**  
Haut-parleur, arrière, droit  
Altavoz, posterior, derecho  
Lautsprecher hinten rechts  
Luidspreker achter, rechts  
Diffusore, posteriore, destro

**Speaker, Front, Right**  
Haut-parleur, avant, droite  
Altavoz, frontal, derecho  
Lautsprecher hinten rechts  
Luidspreker achter, rechts  
Diffusore, posteriore, destro

**Speaker, Rear, Left**  
Haut-parleur, arrière, gauche  
Altavoz, posterior, izquierdo  
Lautsprecher vorne links  
Luidspreker voor, links  
Diffusore, anteriore, sinistro

**Speaker, Front, Left**  
Haut-parleur, avant, gauche  
Altavoz, frontal, izquierdo  
Lautsprecher hinten links  
Luidspreker achter, links  
Diffusore, posteriore, sinistro

**Speaker, Front, Right**  
Haut-parleur, avant, droite  
Altavoz, frontal, derecho  
Lautsprecher vorne rechts  
Luidspreker voor, rechts  
Diffusore, anteriore, destro

**Speaker, Rear, Right**  
Haut-parleur, arrière, droit  
Altavoz, posterior, derecho  
Lautsprecher hinten rechts  
Luidspreker achter, rechts  
Diffusore, posteriore, destro

**Speaker, Front, Right**  
Haut-parleur, avant, droite  
Altavoz, frontal, derecho  
Lautsprecher hinten rechts  
Luidspreker achter, rechts  
Diffusore, posteriore, destro

**Speaker, Rear, Left**  
Haut-parleur, arrière, gauche  
Altavoz, posterior, izquierdo  
Lautsprecher vorne links  
Luidspreker voor, links  
Diffusore, anteriore, sinistro

**Speaker, Front, Left**  
Haut-parleur, avant, gauche  
Altavoz, frontal, izquierdo  
Lautsprecher hinten links  
Luidspreker achter, links  
Diffusore, posteriore, sinistro

**Speaker, Rear, Right**  
Haut-parleur, arrière, droit  
Altavoz, posterior, derecho  
Lautsprecher hinten rechts  
Luidspreker achter, rechts  
Diffusore, posteriore, destro

**Speaker, Front, Right**  
Haut-parleur, avant, droite  
Altavoz, frontal, derecho  
Lautsprecher hinten rechts  
Luidspreker achter, rechts  
Diffusore, posteriore, destro

**Speaker, Rear, Left**  
Haut-parleur, arrière, gauche  
Altavoz, posterior, izquierdo  
Lautsprecher vorne links  
Luidspreker voor, links  
Diffusore, anteriore, sinistro

**Speaker, Front, Left**  
Haut-parleur, avant, gauche  
Altavoz, frontal, izquierdo  
Lautsprecher hinten links  
Luidspreker achter, links  
Diffusore, posteriore, sinistro

**Speaker, Rear, Right**  
Haut-parleur, arrière, droit  
Altavoz, posterior, derecho  
Lautsprecher hinten rechts  
Luidspreker achter, rechts  
Diffusore, posteriore, destro

**Speaker, Front, Right**  
Haut-parleur, avant, droite  
Altavoz, frontal, derecho  
Lautsprecher hinten rechts  
Luidspreker achter, rechts  
Diffusore, posteriore, destro

